



GATE ALARM EXAMPLE

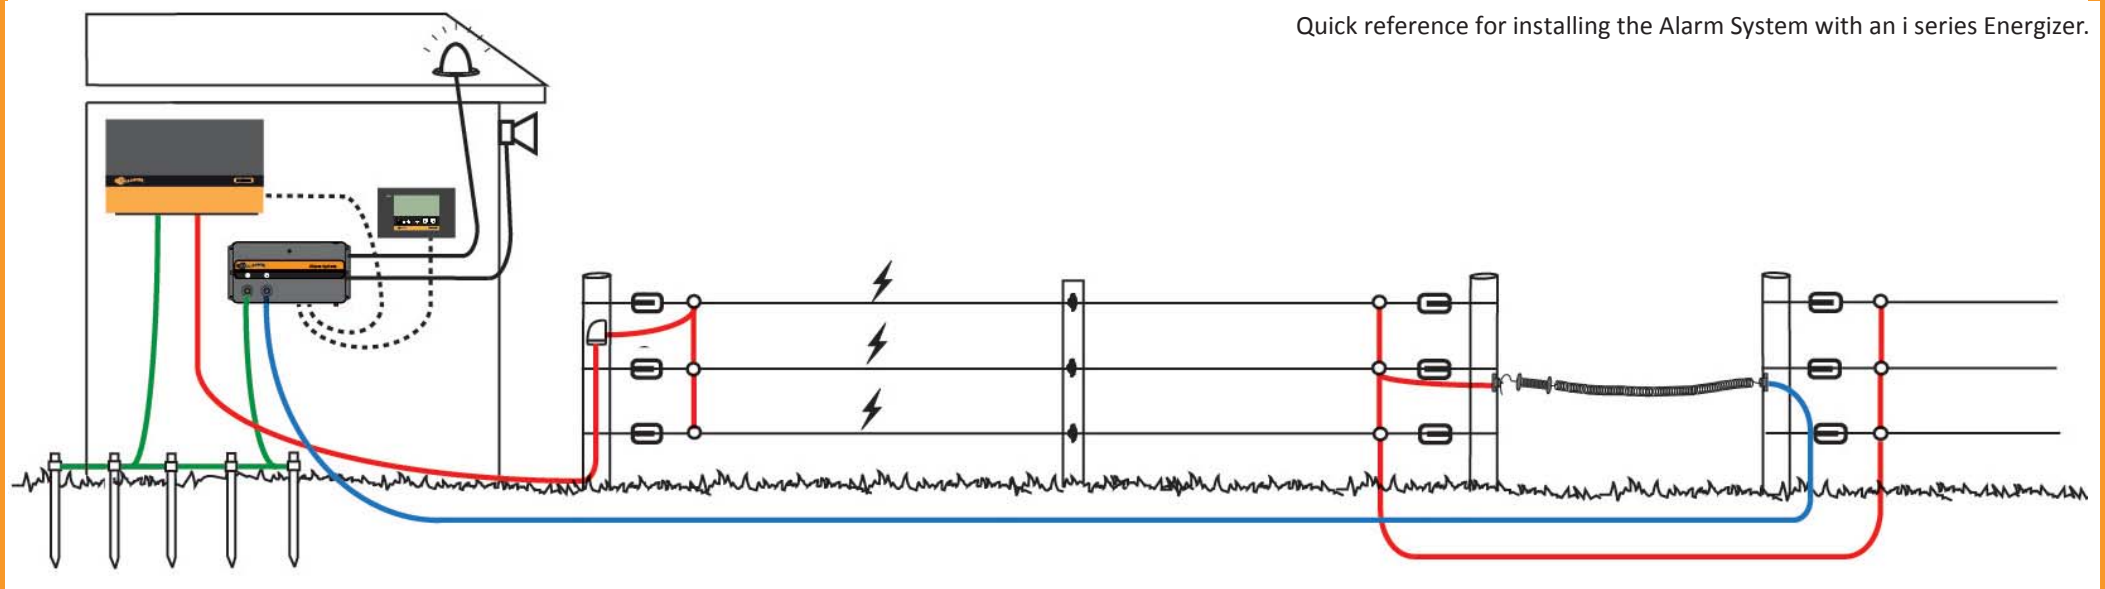

ALARM SYSTEM

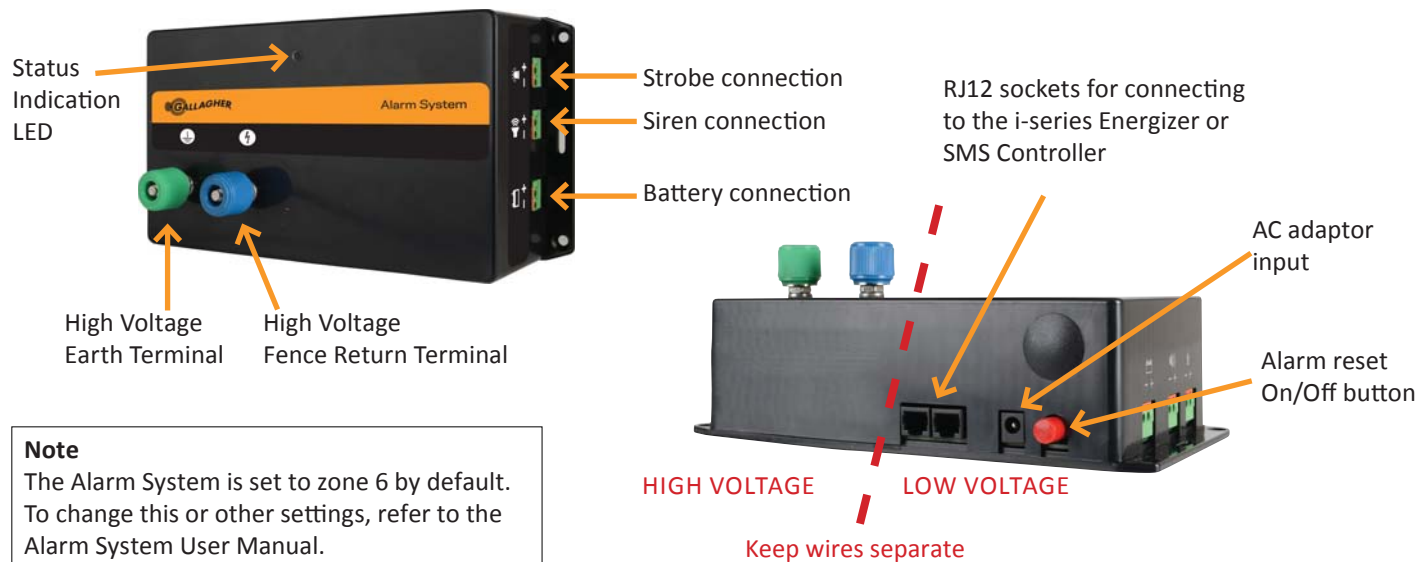

ADJUSTING ALARM LEVEL



1. Select zone 6 using arrow buttons.
2. Press settings button.
3. Choose alarm alert voltage using buttons.
4. Press settings button to confirm.